


Quick Start Guide

6652WSSB
6652WUSSB
6660WUSSB

- 1 Connect your computer to the projector using the supplied computer cable (VGA).
- 2 Connect the supplied power cord.
- 3 Remove the lens cap.
- 4 Turn on the projector.
Press the  (POWER) button on the projector cabinet or the POWER ON button on the remote control.
- 5 Select a source.

TIP:
Press the AUTO ADJ. button to optimize an RGB image automatically.

- 6 Adjust an image size and position.

[LENS SHIFT]

1. Open the lens shift cover.
2. Turn the lens shift dials clockwise or counterclockwise.
◀▶ (Horizontal) ◻◻ (Vertical)
3. Close the lens shift cover.

[FOCUS]

Turn the focus ring.


 
[ZOOM]

Turn the zoom lever.

[TILT FOOT]


Turn the left and right tilt foot to adjust.

- 7 Turn off the projector.


1. Press the  (POWER) button on the projector cabinet or the STANDBY button on the remote control.
2. Press either the  (POWER) or the STANDBY button again.
3. Mount the lens cap.
4. Disconnect all the cables.

Step 1 Connect your computer to the projector.


Step 2 Connect the supplied power cord.

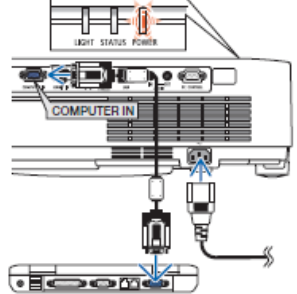

Step 3 Remove the lens cap.

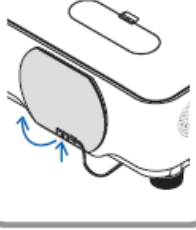


Step 4 Turn on the projector.

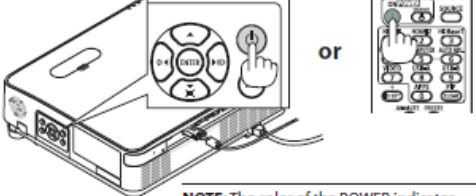


NOTE: The color of the POWER indicator
ORANGE [Standby] → BLUE [Power On]
In the state, [STANDBY MODE] is [NORMAL].

Step 5 Select a source.



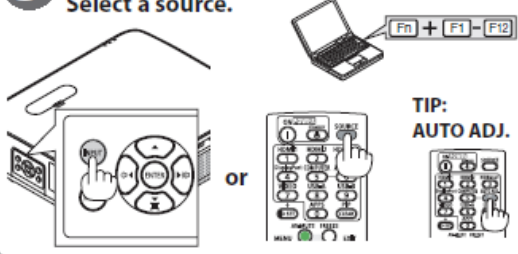



TIP: AUTO ADJ.




Step 6 Adjust an image size and position.

[LENS SHIFT]

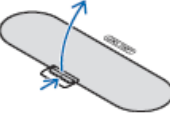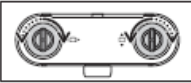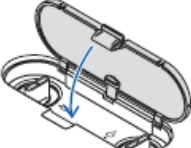
1. 
2. 
3. 

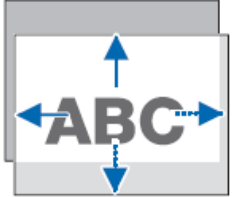


[FOCUS]




[ZOOM]

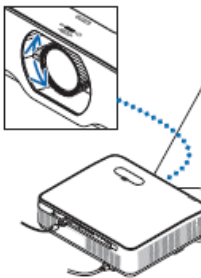

[TILT FOOT]

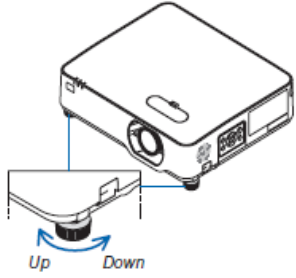

Step 7 Turn off the projector.

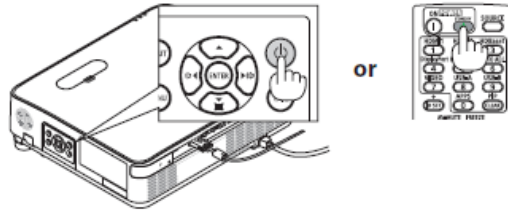

NOTE: The color of the POWER indicator
BLUE [Power On] → ORANGE [Standby]
In the state, [STANDBY MODE] is [NORMAL].

× 2 times