



Scan for full manual

810 Quick Start Guide


This guide helps you install and use your 810 for the first time.

Go to www.kramerav.com/downloads/810 to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box

- ✓ 810 Color Bar/Audio Generator
 - ✓ 1 Power supply (12V DC)
- ✓ 4 Rubber feet
 - ✓ 1 Quick start guide

Step 2: Get to know your 810

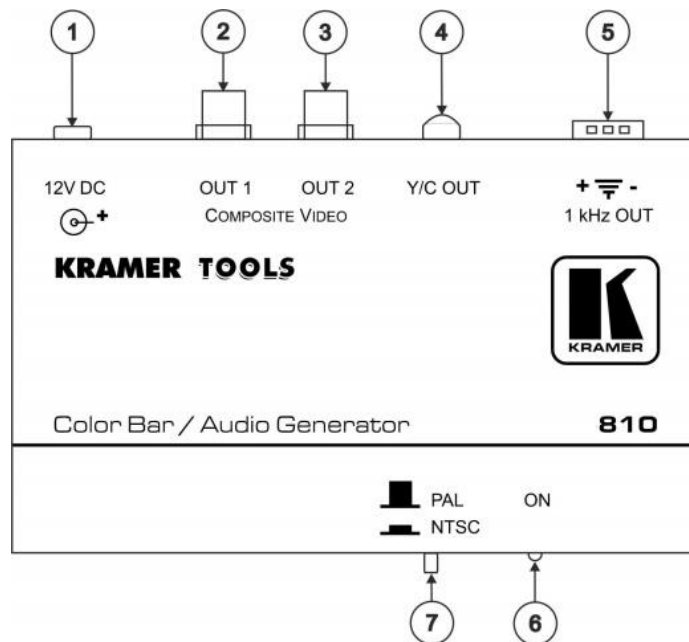


#	Feature	Function
1	12V DC	+12V DC connector for powering the unit
2	OUT 1 BNC Connector	2 Composite video outputs
3	OUT 2 BNC Connector	
4	Y/C OUT 4-pin Connector	s-Video output
5	1 kHz OUT 3-PIN Terminal Block Connector	Balanced (or unbalanced) audio output
6	ON LED	Illuminates when receiving power
7	PAL / NTSC Selector Switch	Selects PAL when released; selects NTSC when pushed in

Step 3: Mount 810

Install 810 using one of the following methods:


- Attach the rubber feet and place the unit on a flat surface.
- Fasten a bracket on each side of the unit and attach it to a flat surface (see www.kramerav.com/downloads/810).
- Mount the unit in a rack using the recommended rack adapter (see www.kramerav.com/product/810).

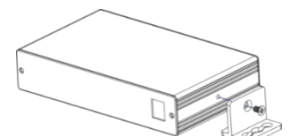

- Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.
- Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the circuits.
- Reliable earthing of rack-mounted equipment should be maintained.

Step 4: Connect inputs and outputs

Always switch OFF the power on each device before connecting it to your 810.

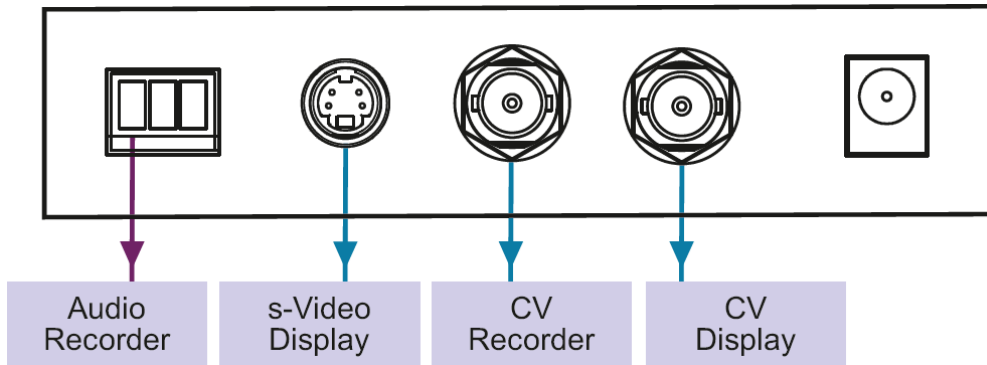

To achieve specified extension distances, use the recommended Kramerav cables available at www.kramerav.com/product/810. Using third-party cables may cause damage!

Step 5: Connect power

Connect the power cord to 810 and plug it into the mains electricity.

Safety Instructions (See www.kramerav.com for updated safety information)



Caution:

- For products with relay terminals and GPIO ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual.
- There are no operator serviceable parts inside the unit.

Warning:

- Use only the power cord that is supplied with the unit.
- Disconnect the power and unplug the unit from the wall before installing.

Step 6: Operate 810

Set for PAL or NTSC standard.

Set the Audio Level trimmer on the underside of the unit.



PAL



NTSC

