



Quick start guide

CL84115/CL84215/CL84265/CL84365

This quick start guide provides you with basic instructions only. For more complete instructions, refer to your Abridged user's manual provided in the package, or see the online Complete user's manual at www.telephones.att.com/manuals.

Telephone base installation

Plug one end of the telephone line cord into a telephone jack or a DSL filter.

If you have DSL high-speed Internet service, a DSL filter (not included) is required.

Plug the other end of the telephone line cord into the telephone jack on the back of the telephone base.

Charger installation

Plug the power adapter into a power outlet not controlled by a wall switch.



Caution: Use only the power adapter provided with this product. To obtain a replacement, visit our website at www.telephones.att.com or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Battery installation

Install the battery, as shown below. Charge your handset(s) before initial use. The battery is fully charged after 10 hours of continuous charging.

Step 1

Plug the battery connector securely into the socket inside the handset battery compartment. Insert the supplied battery with the label **THIS SIDE UP** facing up, as indicated.

Step 2

Align the cover flat against the battery compartment, then slide it upwards until it clicks into place.

CHARGE light

Step 3

Charge the handset by placing it face forward in the handset charger. The **CHARGE** light on the top of the handset is on during charging.

Caution: Use only the supplied rechargeable battery or replacement battery (model BT183342/BT283342).

Quick reference guide - cordless handset

CHARGE indicator

On when the handset is charging in the charger.

▼CID/VOLUME

Press ▼CID to show caller ID log when the handset is not in use.

Press to scroll down while in menus.

While entering names or numbers, press to move the cursor to the left.

Press to decrease the listening volume when on a call, or to decrease the message playback volume.

REDIAL/PAUSE

Press repeatedly to view the last 10 numbers dialed. While entering numbers, press and hold to insert a dialing pause.

PHONE/FLASH

Press to make or answer a call. During a call, press to answer an incoming call when you receive a call waiting alert.

During message playback, press to call back the caller if the caller's number is available.

✉1

While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it.

Press and hold to set or dial your voicemail number.

TONE*/a>A

Press to switch to tone dialing temporarily during a call if you have pulse service.

While entering names, press to change the next letter to upper or lower case.

🔊/SPEAKER

Press to make or answer a call using the speakerphone.

Press to switch between the speakerphone and the handset.

Cordless handset side view

PUSH TO TALK

Press to initiate a one-to-one or one-to-group broadcast.

Press and hold to broadcast to a group of system devices.

▲DIR/VOLUME

Press ▲DIR to show directory entries when the handset is not in use.

Press to scroll up while in menus.

While entering names or numbers, press to move the cursor to the right.

Press to increase the listening volume when on a call, or to increase the message playback volume.

MENU/SELECT

When the handset is not in use, press to show the menu.

While in the menu, press to select an item or save an entry or setting.

OFF/CANCEL

During a call, press to hang up.

While in a menu, press to cancel an operation, back up to the previous menu, or exit the menu display; or press and hold this button to exit to idle mode.

When the handset is ringing, press to mute the ringer temporarily.

Press and hold while the telephone is not in use to erase the missed call indicator.

QUIET# (pound key)

Press repeatedly to display other dialing options when reviewing a caller ID log entry.

Press and hold to enter the QUIET mode setting screen, or to deactivate QUIET mode.

EQ

During an outside call, intercom call, message or announcement playback, press to change the audio quality to best suit your hearing.

MUTE/DELETE

During a call, press to mute the microphone.

When the handset is ringing, press to mute the ringer temporarily.

While reviewing the caller ID log, the directory or the redial memory, press to delete an individual entry.

While predialing, press to delete digits.

During message or announcement playback, press to delete the playing message or the recorded announcement.

Quick reference guide - telephone base

✉1

Press and hold to set or to dial your voicemail number.

IN USE indicator

On when the telephone is in use, or when the answering system is answering an incoming call.

On when a handset is being registered.

Flashes when there is an incoming call or when all handsets are being deregistered.

Flashes when another telephone is in use on the same line.

Large tilt display



VOL ▲/VOL ▼

During message playback or call screening, press to adjust the listening volume.

While in idle mode, press to adjust the base ringer volume.

When on a call, press to adjust the listening volume.

INT

Press to initiate an intercom conversation or transfer a call.

PTT/FLASH

Press to initiate a one-to-one or one-to-group broadcast.

Press and hold to broadcast to a group of system devices.

During a call, press to answer an incoming call when you receive a call waiting alert.

MIC

Microphone.

📶/HANDSET LOCATOR

While the telephone is idle, press to page all handsets.

CANCEL

While in a menu, press to cancel an operation, back up to the previous menu or exit the menu display; or press and hold to go back to idle mode.

When the telephone base is ringing, press to mute the ringer temporarily.

When the telephone base is not in use, press and hold to erase the missed call indicator.

▼CID

Press to display the caller ID log when the telephone is not in use.

Press to scroll down while in menus and lists.

While entering names or numbers, press to move the cursor to the left.

▲DIR

Press to display the directory when the telephone is not in use.

Press to scroll up while in menus and lists.

While entering names or numbers, press to move the cursor to the right.

MENU/SELECT

When the telephone base is not in use, press to show the menu.

While in the menu, press to confirm or save an entry or setting.

REDIAL/PAUSE

Press repeatedly to view the last 10 numbers dialed.

While entering numbers, press and hold to insert a dialing pause.

X/DELETE

While reviewing the caller ID log, the directory or the redial memory, press to delete an individual entry.

While predialing, press to delete digits.

During message or announcement playback, press to delete the playing message or announcement.

Press twice to delete all old messages when the telephone is not in use.

◀/REPEAT

During playback, press to repeat the playing message.

During playback, press twice to play the previous message.

▶/SKIP

Press to skip a message.

📞/RECORD

Press to record memo or record your own announcement.

📞/ANS ON/OFF

Press to turn the built-in answering system on or off.

▶/PLAY/STOP

Press to start or stop message playback.

MUTE

During a call, press to mute the microphone.

When the telephone is ringing, press to mute the ringer temporarily.

🔊/SPEAKER

Press to make or answer a call using the speakerphone.

Initial settings

We recommend you program your telephone system before use.

The following are a few examples of common features to set before using the telephone. Refer to the **Handset and telephone base settings** and **Answering system settings** in the Abridged user's manual or the online Complete user's manual for detailed instructions on setting all telephone features.

Set date/time

Set the date/time before using the answering system.

Using a cordless handset or the telephone base:

1. **MENU** -> ▼ or ▲ -> **Set date/time** -> **SELECT**.
2. Enter the month, day and year using the dialing keys -> **SELECT**.
3. Enter the hour and minute using the dialing keys.
4. ▼ or ▲ to choose **AM** or **PM** -> **SELECT**.

Basic answering system setup via voice guide

You can follow the voice guide to record your own announcement, set the number of rings, and set the message alert tone.

Using the telephone base:

1. **MENU** -> ▼ or ▲ -> **Answering sys** -> **SELECT**.
2. ▼ or ▲ -> **Voice guide** -> **SELECT**.
3. Set up your answering system by inputting the designated numbers, as instructed.

Record your own announcement

Your outgoing announcement plays when calls are answered by the answering system. You can use the preset announcement to answer calls, or replace it with your own recorded announcement.

Using a cordless handset or the telephone base:

1. **MENU** -> ▼ or ▲ -> **Answering sys** -> **SELECT**.
2. **SELECT** to select **Announcement**.
3. ▼ or ▲ -> **Record annc** -> **SELECT**.
4. After the tone, speak towards the handset or telephone base to record your announcement. Press **5** to end recording.

-OR-

Using the telephone base:

1. **📞/RECORD** -> ▼ or ▲ -> **Announcement** -> **SELECT**.
2. After the tone, speak towards the handset or telephone base to record your announcement. Press **5** to end recording.

Number of rings

You can set the answering system to answer an incoming call after two, three, four, five or six rings, or toll saver. If you choose toll saver, the answering system answers a call after two rings when you have new messages, or after four rings when there are no new messages. This enables you to check for new messages and avoid paying unnecessary long distance charges if you are calling from out of your local area.

If you want the built-in answering system instead of the voicemail to answer a call, you should set the answering system to answer a call at least two rings before the voicemail is set to answer. Contact your telephone service provider for information on your voicemail settings.

Using a cordless handset or the telephone base:

1. **MENU** -> ▼ or ▲ -> **Answering sys** -> **SELECT**.
2. ▼ or ▲ -> **Ans sys setup** -> **SELECT**.
3. ▼ or ▲ -> **# of rings** -> **SELECT**.
4. ▼ or ▲ -> Choose among **2, 3, 4, 5, 6** or **Toll saver** -> **SELECT**.

Ringer volume

You can set the ringer volume level to one of the six levels or turn the ringer off.

Using a cordless handset or the telephone base:

1. **MENU** -> ▼ or ▲ -> **Ringers** -> **SELECT**.
2. **SELECT** to select **Ringer volume**.
3. ▼ or ▲ to choose the desired level -> **SELECT**.

