



Registering Headsets to W70B



Registering Headsets to W70B

1. Introduction

2. Switching Headset Mode (Only Applicable to WH62/WH63/WH63 E2/WH64/WH68)

3. Registering the Headset

4. Pairing the Headset with a Handset

5. Using the Headset to Manage Calls

Introduction

After registering the headsets to the W70B, you can use them as standalone devices or with a handset registered at the same base.

Supported Headsets

You can register the following headsets to W70B:

- WH62/WH63
- WH62 Portable/WH63 Portable
- WHM621 with Charging Cable
- WHD622 with Charging Cable
- WHM631 with Charging Cable
- WH63 E2/WH64/WH68
- WH64 Hybrid/WH68 Hybrid
- WH64 Hybrid with Charging Stand
- WH68 Hybrid with Charging Stand
- WHM641/WHD642/WHD682



- This feature is only applicable to W70B.
- Please make sure the W70B firmware is 146.87.255.1 or later.
- Please make sure the WH62/WH63 firmware is 104.432.0.30 or later.
- Please make sure the WH63 E2/WH64/WH68 firmware is 30.121.0.10/29.121.0.10/63.121.0.10 or later.

Registering Headsets to W70B

WH62



WH62 Portable



WHM621/WHD622 with Charging Cable



WH63



WH63 Portable



WHM631 with Charging Cable



Registering Headsets to W70B

WH64



WH64 Hybrid



WH63 E2



WH68



WH68 Hybrid



- For WH62/WH63/WH64/WH63 E2/WH68, after switch the mode, the base in this feature will be idle.
- For WH62 Portable /WH63 Portable/WH64 Hybrid/WH68 Hybrid, the WDD60 Dongle in this feature will be idle.
- The WHM621 with Charging Cable /WHD622 with Charging Cable /WHM631 with Charging Cable/ WHM641/WHD642/WHD682 is the most suitable series products for this feature.

Hardware Introduction

This guide will take WH64 as an example.



Switching Headset Modes (*Only Applicable to WH62/WH63/WH63 E2/WH64/WH68)

- **Description:** You can register the headset to the W70B and use it as a stand-alone device or pair the headsets with a handset registered on the W70B.
- **Switching Method:** Hold the **Voice** button and **Phone** button of the headset base for 5 seconds. The **PC**, **Voice** and **Phone** button LED indicator on the headset base will flash for 5 seconds and off. After this, the headsets will not connect to the base; the base can only be used to charge.
- **LED Indicator Status:** When you successfully switch to registration mode, only the **Voice** button on the base glows purple.



Registering the Headset

Before registering the headset, you have to put the base station into registration mode.

1 Put the W70B into registration mode


Method 1:

Long press the  on the base station till the registration LED flashes.



Method 2:

- ① Go to **Status → Handset & Voip** on the W70B web user interface.
- ② Click **Start Register Handset** to put the W70B into the registration mode.

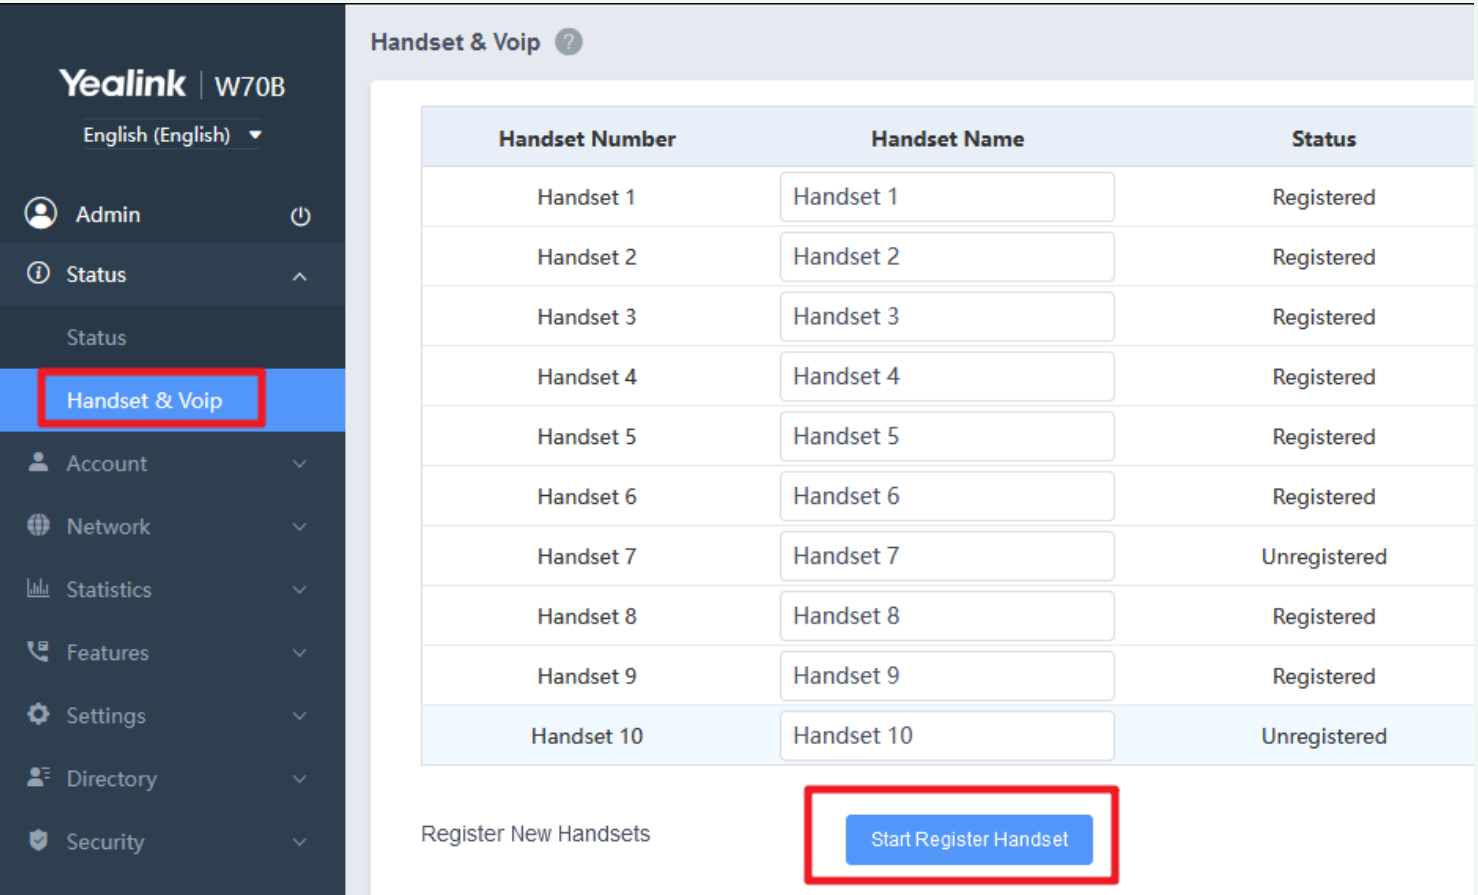

2 Registering the Headset

- ① Reboot the headset and put the headset into the registration mode according to the following step.



Call Control Button

1. Hold for 5 seconds.
The voice prompts “pairing mode” and the Call Control button flashes blue.

- ② After the headset and W70B are all in the registration mode, the headset will automatically register to the W70B.

When the **Call Control** button flashes blue and the voice prompts “**base connected**,” you successfully register the headset to the base.

Pairing the Headset with a Handset

You can pair the headset with a handset registered on the W70B. The headset will get the same extension number as the handset.

- 1. On the web user interface, go to **Account** → **Number Assignment**. Check the account you want to share with the handset.

Yealink | W70B

English (English)

Admin

Status

Account

Register

Basic

Codec

Advanced

Number Assignment

Alarm Assignment

Network

Statistics

Features

Number Assignment

Incoming Lines

	Line No.&Name									
Handset No.	1 134001	2 134002	3 134003	4 134004	5 134005	6 134006	7 134007	8 134008	9 134009	10 134010
Handset 1	☒	☒	☐	☐	☐	☐	☐	☐	☐	☐
Handset 2	☐	☒	☐	☐	☐	☐	☐	☐	☐	☐
Handset 3	☐	☐	☒	☐	☐	☐	☐	☐	☐	☐
Handset 4	☐	☐	☐	☒	☐	☐	☐	☐	☐	☐
Handset 5	☐	☐	☐	☐	☒	☐	☐	☐	☐	☐
Handset 6	☐	☐	☐	☐	☐	☒	☐	☐	☐	☐
Handset 7	☐	☐	☐	☐	☐	☐	☒	☐	☐	☐
Handset 8	☐	☐	☐	☐	☐	☐	☐	☒	☐	☐
Handset 9	☐	☐	☐	☐	☐	☐	☐	☐	☒	☐
Handset 10	☐	☐	☐	☐	☐	☐	☐	☐	☐	☒




The handsets need to be registered on the W70B first.

Using the Headset to Manage Calls

After you pair the headset with a handset registered on the W70B, both the headset and handset will ring when receiving an incoming call.

1 Push

Scene: If you are using the handset to answer the call, go to **Options** → **Push** on the handset, you can push the call to the headset.

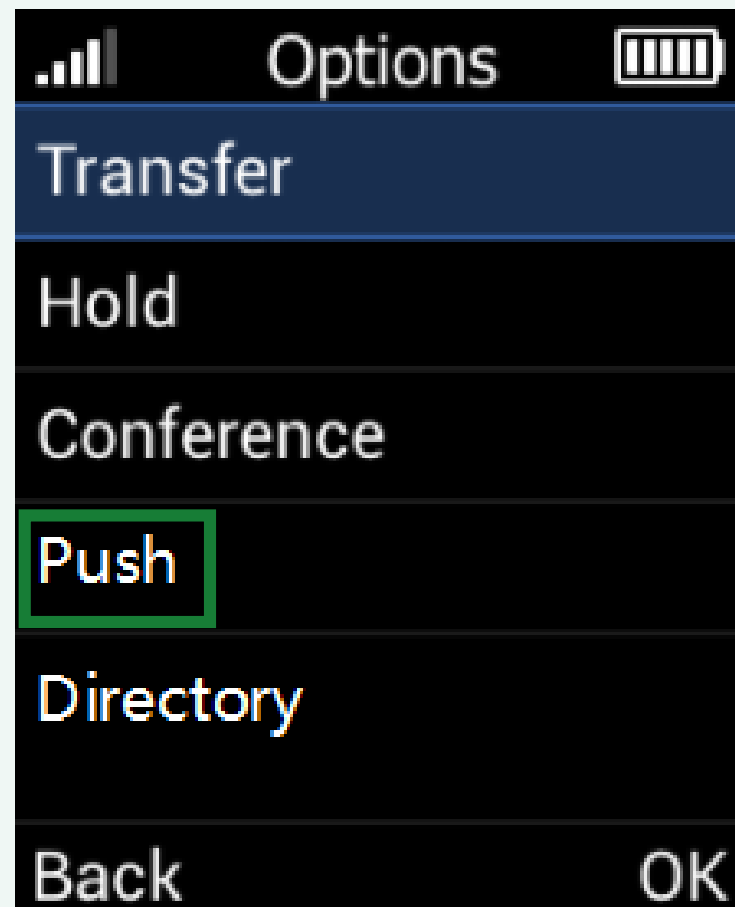

2 Retrieve

Scene: If you are using the headset to answer the call, hold the **TRAN** key on the handset, you can retrieve the call to the handset.



3 Redial

Scene: Double press the **Call Control** button on the headset. You can directly call the last call record.

Note: If you had configured the speed dial number, the headset would dial out the number when you double-press the button.



Yealink

Visit support.yealink.com for more information.